Primada Living

PV-8100

Cordless Cyclone Vacuum Cleanner

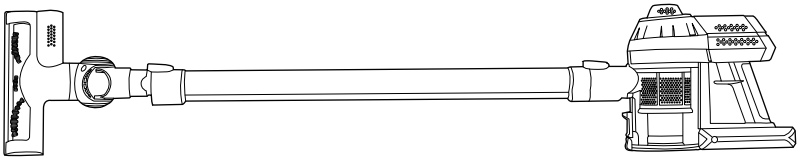

Instruction Manual

Get start...

Thank you *for your choice!*

Start... 01

Your Product 01-04
General Safety Information 05
General Product Information 06-11
Product Introduction
Operation

More details... 12

Maintenance 13-17
Product Maintenance
FAQs

Your Product

Power Head—extra motor can provide strong suction to easy clean short pile carpet and all articles in narrow gaps

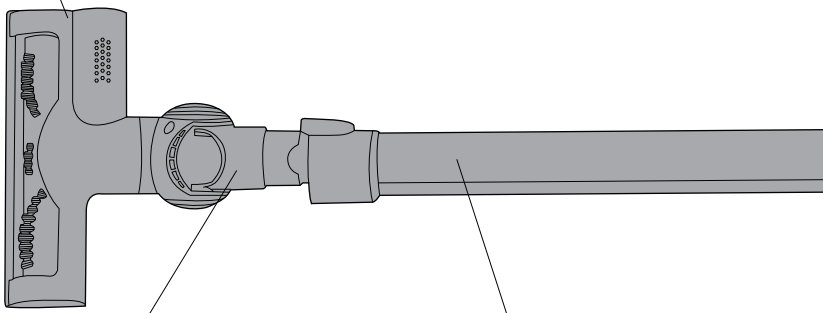

70 cm Aluminum tube, easy roof reach cleaning

“Tri-balls”Technology contributes perfect maneuverability

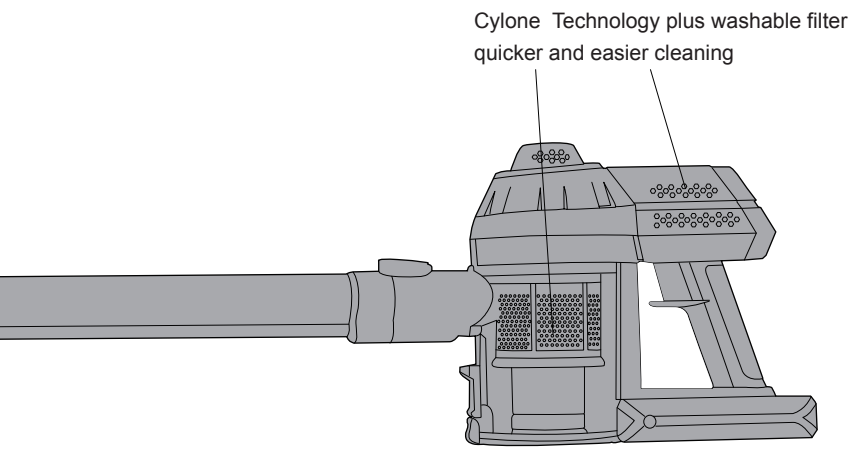
Cylone Technology plus washable filter
quicker and easier cleaning

Power Head

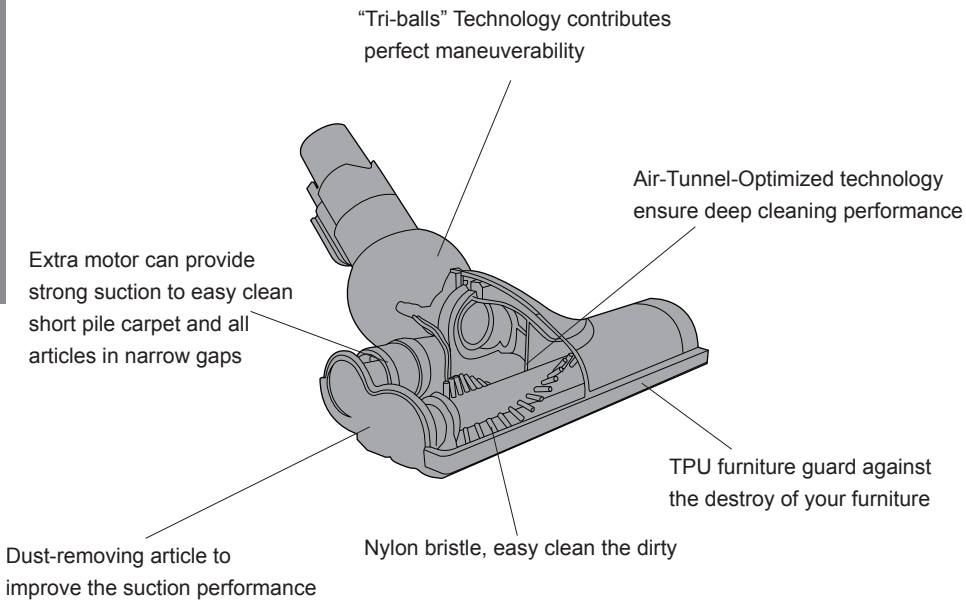
"Tri-balls" Technology contributes perfect maneuverability
Air-Tunnel-Optimized technology ensure deep cleaning performance
Extra motor can provide strong suction to easy clean short pile carpet and all articles in narrow gaps
TPU furniture guard against the destroy of your furniture
Dust-removing article to improve the suction performance
Nylon bristle, easy clean the dirty

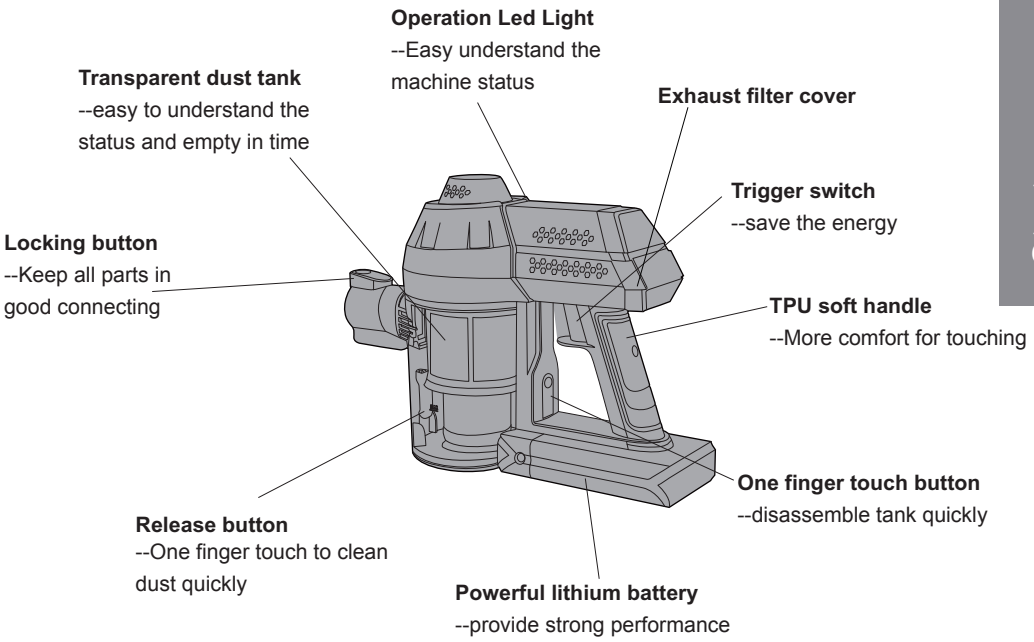
Operation Led Light
--Easy understand the machine status
Transparent dust tank
--easy to understand the status and empty in time
Exhaust filter cover
Trigger switch
--save the energy
Locking button
--Keep all parts in good connecting
TPU soft handle
--More comfort for touching
One finger touch button
--disassemble tank quickly
Release button
--One finger touch to clean dust quickly
Powerful lithium battery
--provide strong performance

General Safety Information

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

• Only use the vacuum cleaner indoors on dry surfaces.

• Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surface.

• Do not use the vacuum cleaner with a damaged cord or plug.

• Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.). Do not vacuum up hard or sharp objects such as glass, nails, screws, etc.

•Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow. Do not use any part of the appliance to touch eyes, ears or put into mouth.

• Children should be supervised to ensure that they do not play with the appliance.

• Stop using if electric leakage or motor overheat, abnormal noise such as body overheat, smelly, low suction, etc.

• Use the original adaptor to charge the battery. Do not use the original adaptor to charge any other battery not belong to this vacuum cleaner. It may cause exploded, human hurt or appliance damage.

• Store the vacuum cleaner in a cool, dry area.

• Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

• If the inlet, tube is blocked, switch off the appliance and remove the blockages before re-starting the vacuum cleaner.

General Product Information

Product Introduction

The packing contents

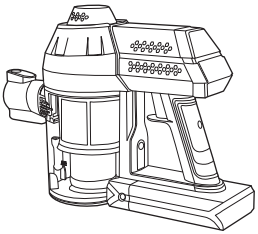

Main body

Rotary combine brush

Crevice tool

Appliance brush

The dusting brush

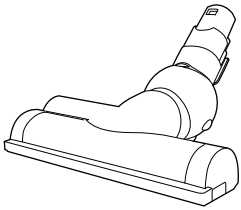

Power head

Small cleaning tool

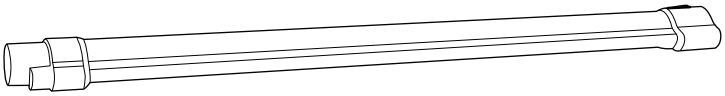

Aluminum tube

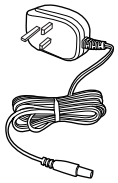

Charger

Black power brush for floor

Red power brush for mattresses

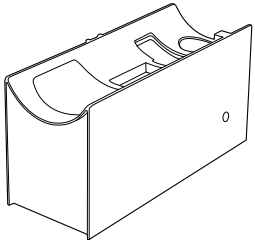

Parking base

* Due to our products need continuous improvement, the configuration as above will be different from each model, we reserve the this right to explain

* Some products' base have the charging function, them depend on specific product

We keep the changing right about the continuous improvement of f all technology and design, and we reserve final interpretation.

Aluminum tube installation instructions

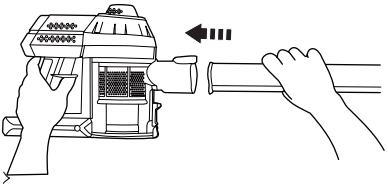

Assembling the aluminum tube

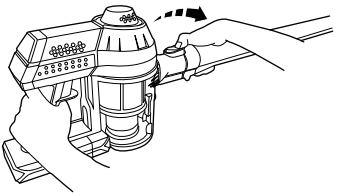

Disassembling the aluminum tube

Power head installation instructions

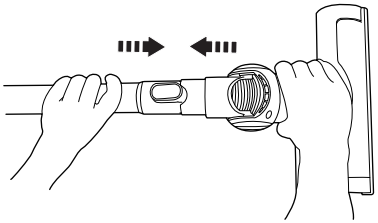

Assembling the power head

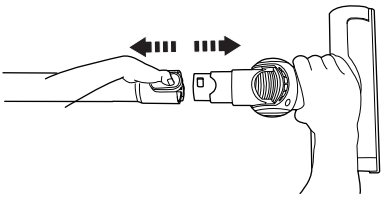

Disassembling the power head

Using accessories

Except the aluminum tube and power head, you can choose our Crevice tool and dusting brush to extend using range.

Crevice

Suit for the narrow and substandard surface, such as wall corner, window, appliances, drawers, car cushion, frame, keyboard and so on.

Dusting brush

Suit for cleaning soft material, such as curtain, textile, sofa and so on

Combined usage of Crevice and dusting brush

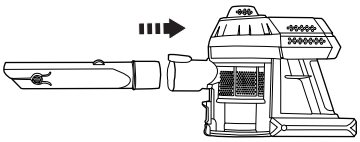

Use crevice separately

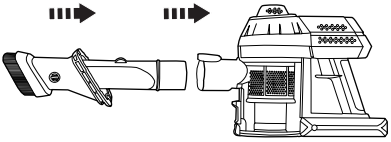

Combine crevice and dusting brush As bristle cleaning

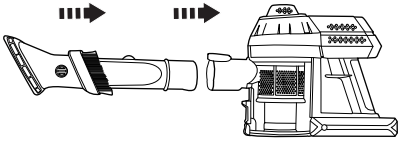

Combine crevice and dusting brush as Static belt cleaning

Parking base instruction:

when you finish cleaning, in order to future using, we advise you put the main body and accessories to our specialized parking base.

Technical Specification

Item	Technical Specification
Voltage	22.2V
Rating Power	150W
Battery volume	1500mAH
Dust capacity	0.35L
Noise Level	≤73dB
Charging Time	3-4Hours

MAX running Time	Successive:12-15min
	Discontinuity:30min
Dimension	1200*230*220MM
Weight	2.7KG

* We keep the changing right about the continuous improvement of all technology and design, and we reserve final interpretation.
* Concerning noise: this data is from our lab testing, which is executed by international standard IEC 60704-1:1997,IEC 60704-2-1:2001.

Operation

Before using

• Please check your vacuum cleaner power status, if not enough, please charge in time. (refer to “product charging”), you can use when it is fully charged.

• According to clean area, you can choose different accessories. (refer to using accessories)

Starting using

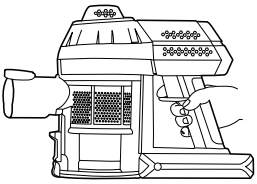

Press the red trap button as switch on, release It when stop using.

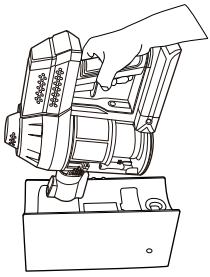

Put your vacuum cleaner back the parking station after using.

Dust Empty

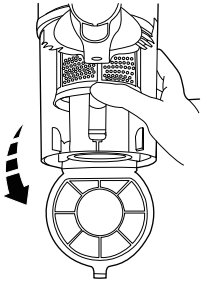

Switch off your vacuum cleaner and pull dust release button to empty.

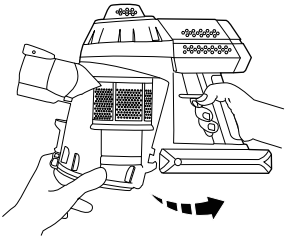

Close the dust tank after emptying dust.

Battery Charging

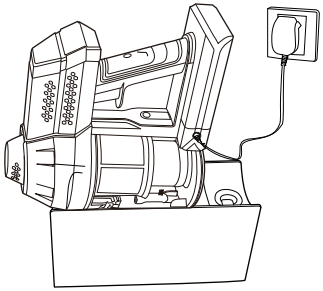

Connect the charging pin with battery and plug in.

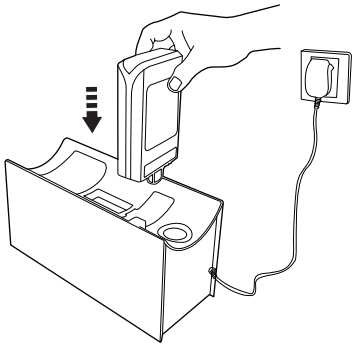

Put the battery on the parking base which has charging function and plug in.

Concerning indicator light

Working	Charging	Fully charged	Lower power
Persistent green light	Blinking red light	Persistent green light	Blinking red light

Reminder:

- Every 3 month after getting the product, please charge 3 hours (no need fully charged) with specialized charger.
- It is forbidden to put the battery on charger for long time. please stop charging when it Charge overtime, in case of battery high heat , deformation or even burn.
- When battery is not used for long time or be deeply discharged, the working time will reduce, in order to get the best using effect, we advise you can use up power (normally above 6 hours), and repeat this action for twice. It can renew.

More details...

Maintenance 13-17
Product Maintenance
FAQs

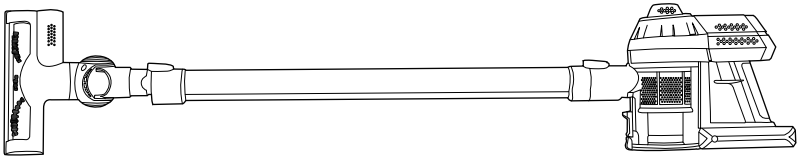

Product Maintenance

To reduce the problem of daily using, periodic maintenance is needed.

Unit(handle part)

• Always switch off and unplug the vacuu cleaner from the electrical outlet before maintenance. (Figure 1)
• Clean the vacuum cleaner by water or Neutral detergent, the cloth should be dry when clean the vacuum cleaner. (Figure 2)
• After finishing the cleaning, the unit should be placed on the position. Pay attention to let the unit avoid the sunshine or damp place. (Figure 3)

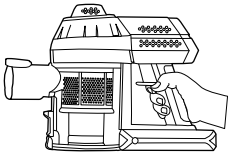

(Figure 1)

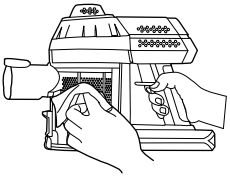

(Figure 2)

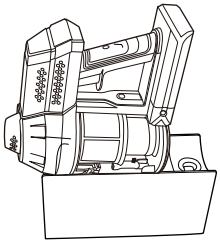

(Figure 3)

Dust bin & dust filtration frame

The structure of the vacuum cleaner is transparent, please pay attention to the dust bin & dust filtration frame, and clean them periodically to avoid the normal using.

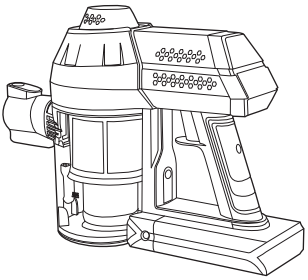

Dust bin maintenance

Once the dust reachs to the Max, pls clean the dust bin in time, over loading is not allowed. Disassembling the tube or the accessory before cleaning the dust bin.

• After the vacuum cleaner switch off, press the button at the side of the dust bin to remove the dirt(as the figure shows) (figure 4)

• If the dirty on the inner dust bin, press the dust bin inner button to remove the dust bin, and use damp cloth to wipe the inner dust bin(figure 5)

• When cleaning is done, assemble the unit, and make sure to click into place when secure.(figure 6)

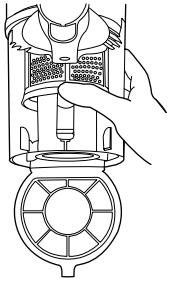

(Figure 4)

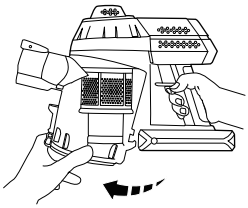

(Figure 5)

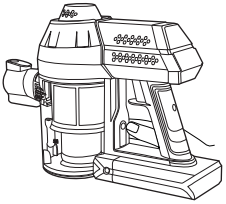

(Figure 6)

Important:
If clean the inner dust tank by wet cloth and put back the tank only to be sure it is totally dry.

Dust tank filtration frame maintenance

• When the vacuum cleaner switch off, press the button of the inner dust bin disassemble the dust bin(figure 7)

• Clean the filtration frame by clean cloth.(figure 8)

• When cleaning is done, assemble the unit, and make sure to click into place when secure.(figure 9)

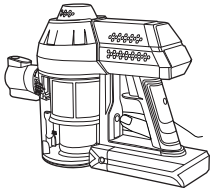

(Figure 7)

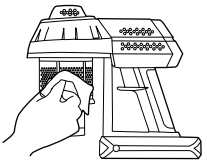

(Figure 8)

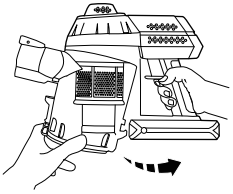

(Figure 9)

Important:
Do not clean the dust bin filtration frame By water directly to protect motor & PCB

Exhaust Filter Maintenance

To make sure the normal using, periodically cleaning is required. 3-6 months changing the HEPA is needed.

• Press the release button, pull the filter, remove the dirt on it. (figure 10)

• Clean the filter by water if the dirt is too much. Assemble the unit again after dry. (figure 11)

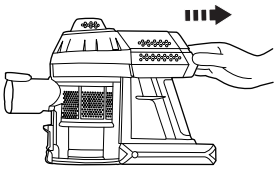

(Figure 10)

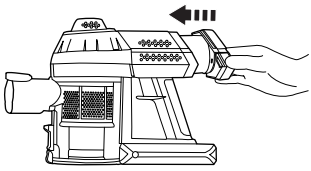

(Figure 11)

Important:
to use the cold water when clean the filter, and assemble the It to the unit when it is totally dry.

Battery replacement

• Switch off, press the bottom button, pull the battery (figure 12)

• Assemble the new battery as the same direction of the arrow which will click into place when secure. (figure 13)

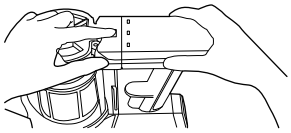

(Figure 12)

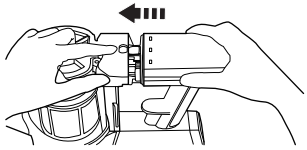

(Figure 13)

Important:

- Keep the battery in cool, dry place when long time not using, keep half power.
- Keep away from metal parts to avoid energy loss.

Power head maintenance

To clean the power brush after 4-5 times usage of the power brush

- To pull the agitator out as the direction of the arrow. (figure 14)
- Remove the hair or the dirt by the gifted tool. (figure 15)
- Wipe the agitator by the dry cloth. (figure 16)
- Assemble the agitator after cleaning. (figure 17)

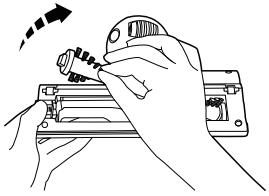

(Figure 14)

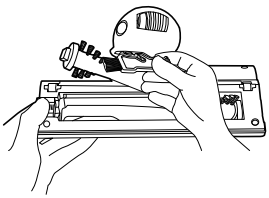

(Figure 15)

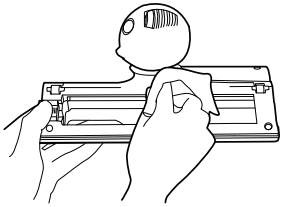

(Figure 16)

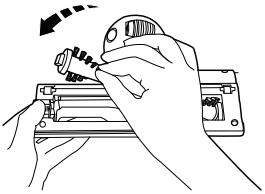

(Figure 17)

FAQs

usual problems	possibility	solution
the vacuum cleaner does not work	The battery is power off	Charge the vacuum cleaner before using
	suction is blogged	clean the suction socket
Suction is weak	Clean the dust bin, filter etc	Clean the dust bin and the exhaust filter
	Agitator is rolled by the hair or somthing	Clean the agitator
	Debugging the above situation, the vacuum still cannot work normally	contact our after service
Abnormal sound of the motor	Suction tube or the aluminum tube is blogged	Clean the suction tube or the aluminum tube
	Debugging the above situation, the vacuum still cannot work normally	contact our after service
Working difficulty of the vacuum cleaner	Many Obstacles in the cleaning area	Remove the obstacles
	Suction tube is blogged	Clean the suction tube
	Debugging the above situation, the vacuum still cannot work normally	Contact our after service
Cannot charge	Main unit did not match the electrical connector	Check and match correctly
	The battery place in the wrong way	Check and place correctly
	Debugging the above situation, the vacuum still cannot work normal	Contact our after service

* We keep the changing right about the continuous improvement of all technology and design, and we reserve final interpretation.

Pro Logic International Limited
Tel: (852) 2365 0655
FAX: (852) 2365 0235
Email: info@iplushome.com
Website: www.primada.com.hk